

CT1 WASH-DMX CHART



Mode/Channel				Channel Name	DMX	Function
21CH	19CH	15CH	14CH			
1	1	1	1	Pan	0-255	0-540
2	2	2	2	Pan 16bit	0-255	16bit adjustable
3	3	3	3	Tilt	0-255	0-230
4	4	4	4	Tilt 16bit	0-255	16bit adjustable
5	5	5	5	Pan/Tilt speed	0-255	fast to slow
6	6	6	6	Dimmer	0-255	0-100%
7	7	7		Dimmer 16bit	0-255	0-100%
8	8	8	7	Strobe	0-19	off
					20-24	on
					25-64	strobe 1, fast to slow
					65-69	on
					70-84	strobe 2 (fast on, slow off), fast to slow
					85-89	on
					90-104	strobe 3 (slow on, fast off), fast to slow
					105-109	on
					110-124	strobe 4 (random), fast to slow
					125-129	on
					130-144	strobe 5 (random fast on, slow off), fast to slow
					145-149	on
					150-164	strobe 6 (random slow on, fast off), fast to slow
					165-169	on
					170-184	strobe 7 (pulse strobe), fast to slow
185-189	on					
190-204	strobe 8 (random pulse strobe), fast to slow					
205-209	on					
210-224	strobe 9 (fade), fast to slow					
225-229	on					
230-244	strobe 10 (pulse strobe), fast to slow					
245-255	on					
9	9	9	8	R	0-255	0-100%
10	10			R 16bit	0-255	0-100%
11	11	10	9	G	0-255	0-100%
12	12			G 16bit	0-255	0-100%
13	13	11	10	B	0-255	0-100%
14	14			B 16bit	0-255	0-100%
15	15	12	11	W	0-255	0-100%
16	16			W 16bit	0-255	0-100%
17	17	13	12	Color	0-4	no function
					5-9	color 1
					10-14	color 2
					15-19	color 3
					20-24	color 4
					25-29	color 5
					30-34	color 6
					35-39	color 7
					40-44	color 8
					45-49	color 9
					50-54	color 10
					55-59	color 11
					60-64	color 12
					65-69	color 13
					70-74	color 14
75-79	color 15					
80-84	color 16					
85-89	color 17					
90-94	color 18					
95-99	color 19					
100-104	color 20					
105-109	color 21					
110-114	color 22					
115-119	color 23					

CT1 WASH-DMX CHART



Mode/Channel				Channel Name	DMX	Function
21CH	19CH	15CH	14CH			
17	17	13	12	Color	120-124	color 24
					125-129	color 25
					130-134	color 26
					135-139	color 27
					140-144	color 28
					145-149	color 29
					150-154	color 30
					155-159	color 31
					160-164	color 32
					165-169	color 33
					170-174	color 34
					175-179	no function
					180-201	color fade, fast to slow
					202-207	stop
208-229	reverse color fade, fast to slow					
230-234	no function					
235-249	color jump, fast to slow					
250-255	no function					
18	18	14	13	Zoom	0-255	from small to big
19				Built-in	0-7	no function
					8-23	auto built-in 1
					24-39	auto built-in 2
					40-55	auto built-in 3
					56-71	auto built-in 4
					72-87	auto built-in 5
					88-103	auto built-in 6
					104-119	auto built-in 7
					120-135	auto built-in 8
					136-151	auto built-in 9
					152-167	auto built-in 10
					168-183	auto built-in 11
					184-199	auto built-in 12
					200-215	auto built-in 13
					216-231	auto built-in 14
					232-247	auto built-in 15
248-255	auto built-in 16 (main built-in)					
20				Built-in speed	0-255	fast to slow
21	19	15	14	Control	0-9	no function
					10-14	pan/tilt blackout
					15-19	reserved
					20-24	reserved
					25-29	reserved
					30-34	reserved
					35-39	reserved
					40-44	reserved
					45-49	reserved
					50-54	pan reset
					55-59	tilt reset
					60-64	zoom reset
					65-69	reserved
					70-74	all reset
					75-79	reserved
					80-84	pan/tilt reverse
					85-89	pan reverse
					90-94	tilt reverse
					95-99	disable pan reverse
					100-104	disable tilt reverse
105-109	disable pan/tilt reverse					
110-114	reserved					
115-119	reserved					
120-124	fan ECO					

CT1 WASH-DMX CHART



Mode/Channel				Channel Name	DMX	Function
21CH	19CH	15CH	14CH			
21	19	15	14	Control	125-129	fan FULL
					130-134	fan AUTO
					135-139	dimmer fast mode
					140-144	dimmer smooth mode
					145-149	Linear curve
					150-154	Square curve
					155-159	I Square curve
					160-164	Scurve
					165-169	white mode
					170-174	full mode
					175-179	color calibration off when single color
					180-184	color calibration on when single color
					185-239	no function
					240-247	color calibration on
					248-255	color calibration off