

# CT4 HYBRID-DMX CHART

Advanced: 29CH Basic: 24CH



Mode/Channel		Channel Name	DMX	Function
29CH	24CH			
1	1	Pan	0-255	0-540
2	2	Pan 16bit	0-255	16bit adjustable
3	3	Tilt	0-255	0-270
4	4	Tilt 16bit	0-255	16bit adjustable
5	5	Pan/Tilt speed	0-255	fast to slow
6	6	Dimmer	0-255	0-100%
7		Dimmer 16bit	0-255	16bit adjustable
8	7	Strobe	0-7	off
			8-15	on
			16-131	synchronized strobe, slow to fast
			132-167	fast close slow open, slow to fast
			168-203	slow close fast open, slow to fast
			204-239	pulse strobe, slow to fast
			240-250	random strobe, slow to fast
251-255	on			
9	8	Cyan	0-255	0-100%
10	9	Magenta	0-255	0-100%
11	10	Yellow	0-255	0-100%
12	11	Color wheel	0-1	white
			2-5	color 1
			6-9	color 2
			10-13	color 3
			14-17	color 4
			18-21	color 5
			22-25	color 6
			26-29	color 7
			30-33	color 8
			34-37	color 9
			38-41	color 10
			42-45	color 11
			46-49	color 12
			50-53	color 13
			54-57	color 14
58-59	white			
60-187	split color			
12	11	Color wheel	188-219	color scroll, fast to slow
			220-223	stop
			224-255	reverse color scroll, slow to fast
13	12	Static gobo wheel	0-3	open

# CT4 HYBRID-DMX CHART

Advanced: 29CH Basic: 24CH



Mode/Channel		Channel Name	DMX	Function
29CH	24CH			
13	12	Static gobo wheel	4-6	gobo 1
			7-9	gobo 2
			10-12	gobo 3
			13-15	gobo 4
			16-18	gobo 5
			19-21	gobo 6
			22-24	gobo 7
			25-27	gobo 8
			28-30	gobo 9
			31-33	gobo 10
			34-36	gobo 11
			37-39	gobo 12
			40-42	gobo 13
			43-45	gobo 14
			46-48	gobo 15
			49-55	gobo 16
			56-59	open
			60-63	gobo 1 shaking, slow to fast
			64-67	gobo 2 shaking, slow to fast
			68-71	gobo 3 shaking, slow to fast
			72-75	gobo 4 shaking, slow to fast
			76-79	gobo 5 shaking, slow to fast
			80-83	gobo 6 shaking, slow to fast
			84-87	gobo 7 shaking, slow to fast
			88-91	gobo 8 shaking, slow to fast
			92-95	gobo 9 shaking, slow to fast
			96-99	gobo 10 shaking, slow to fast
100-103	gobo 11 shaking, slow to fast			
104-107	gobo 12 shaking, slow to fast			
108-111	gobo 13 shaking, slow to fast			
112-115	gobo 14 shaking, slow to fast			
116-119	gobo 15 shaking, slow to fast			
120-123	gobo 16 shaking, slow to fast			
124-127	open			
128-189	gobo scroll, fast to slow			
190-193	stop			
194-255	reverse gobo scroll, slow to fast			
14	13	Rotating gobo wheel	0-5	open
			6-11	gobo 1

# CT4 HYBRID-DMX CHART

Advanced: 29CH Basic: 24CH



Mode/Channel		Channel Name	DMX	Function
29CH	24CH			
14	13	Rotating gobo wheel	12-17	gobo 2
			18-23	gobo 3
			24-29	gobo 4
			30-35	gobo 5
			36-41	gobo 6
			42-47	gobo 7
			48-53	gobo 8
			54-63	gobo 9
			64-69	gobo 9 shaking, slow to fast
			70-75	gobo 8 shaking, slow to fast
			76-81	gobo 7 shaking, slow to fast
			82-87	gobo 6 shaking, slow to fast
			88-93	gobo 5 shaking, slow to fast
			94-99	gobo 4 shaking, slow to fast
			100-105	gobo 3 shaking, slow to fast
			106-111	gobo 2 shaking, slow to fast
			112-117	gobo 1 shaking, slow to fast
			118-127	open
128-191	gobo scroll, slow to fast			
192-255	reverse gobo scroll, slow to fast			
15	14	Gobo rotating	0-63	gobo index
			64-145	gobo rotating, fast to slow
			146-149	stop
			150-231	reverse gobo rotating, slow to fast
			232-255	gobo rotating back and forth
16		Gobo rotating 16bit	0-255	16bit adjustable
17	15	Animation wheel	0-1	no function
			2-124	animation rotating, fast to slow
			125-130	stop
			131-255	animation rotating, slow to fast
18	16	Prism 1	0-4	no function
			5-255	prism
19	17	Prism 1 rotating	0-127	prism index
			128-189	prism rotating, fast to slow
			190-193	stop
			194-255	reverse prism rotating, slow to fast
20	18	Prism 2	0-4	no function
			5-255	prism
21	19	Prism 2 rotating	0-127	prism index

# CT4 HYBRID-DMX CHART

Advanced: 29CH Basic: 24CH



Mode/Channel		Channel Name	DMX	Function
29CH	24CH			
21	19	Prism 2 rotating	128-189	prism rotating, fast to slow
			190-193	stop
			194-255	reverse prism rotating, slow to fast
22	20	Frost 1	0-255	frost 1 effect
23	21	Frost 2	0-3	no function
			4-255	frost 2 effect
24	22	Focus	0-255	0-100%
25		Focus 16bit	0-255	16bit adjustable
26		Auto focus	0-10	no function
			11-59	5 meters auto focus
			60-108	10 meters auto focus
			109-157	15 meters auto focus
			158-206	20 meters auto focus
			207-255	auto detect distance
27	23	Zoom	0-255	Big to small
28		Zoom 16bit	0-255	16bit adjustable
29	24	Control	0-29	no function
			30-39	XY swap on
			40-49	XY swap off
			50-59	no function
			60-69	no function
			70-79	pan/tilt blackout enable
			80-89	pan/tilt balckout disable
			90-99	color blackout enable
			100-109	color blackout disable
			110-119	gobo blackout enable
			120-129	gobo blackout disable
			130-139	lamp on
			140-149	pan/tilt reset
			150-159	head reset
			160-179	no function
			180-184	no function
			185-189	no function
			190-199	no function
200-209	all reset			
210-219	all blackout enable			
220-229	all blackout disable			
230-239	lamp off			
240-245	no function			

# CT4 HYBRID-DMX CHART

Advanced: 29CH Basic: 24CH



Mode/Channel		Channel Name	DMX	Function
29CH	24CH			
29	24	Control	246-250	no function
			251-255	no function