

TOUGH 350 PAR-DMX



Mode/Channel			Channel Name	DMX	Function
14CH	10CH	9CH			
1	1	1	Dimmer	0-255	0-100%
2	2		Dimmer 16bit	0-255	0-100%
3	3	2	Strobe	0-19	off
				20-24	on
				25-64	strobe 1, fast to slow
				65-69	on
				70-84	strobe 2 (fast on, slow off), fast to slow
				85-89	on
				90-104	strobe 3 (slow on, fast off), fast to slow
				105-109	on
				110-124	strobe 4 (random), fast to slow
				125-129	on
				130-144	strobe 5 (random fast on, slow off), fast to slow
				145-149	on
				150-164	strobe 6 (random slow on, fast off), fast to slow
				165-169	on
				170-184	strobe 7 (pulse strobe), fast to slow
				185-189	on
190-204	strobe 8 (random pulse strobe), fast to slow				
205-209	on				
210-224	strobe 9 (fade), fast to slow				
225-229	on				
230-244	strobe 10 (pulse strobe), fast to slow				
245-255	on				
4	4	3	R	0-255	0-100%
5			R 16bit	0-255	0-100%
6	5	4	G	0-255	0-100%
7			G 16bit	0-255	0-100%
8	6	5	B	0-255	0-100%
9			B 16bit	0-255	0-100%
10	7	6	W	0-255	0-100%
11			W 16bit	0-255	0-100%
12	8	7	Color	0-4	no function
				5-9	color 1
				10-14	color 2
				15-19	color 3
				20-24	color 4
				25-29	color 5
				30-34	color 6
				35-39	color 7
				40-44	color 8
				45-49	color 9
				50-54	color 10
				55-59	color 11
				60-64	color 12
				65-69	color 13
				70-74	color 14
				75-79	color 15
80-84	color 16				
85-89	color 17				

TOUGH 350 PAR-DMX



Mode/Channel			Channel Name	DMX	Function
14CH	10CH	9CH			
12	8	7	Color	90-94	color 18
				95-99	color 19
				100-104	color 20
				105-109	color 21
				110-114	color 22
				115-119	color 23
				120-124	color 24
				125-129	color 25
				130-134	color 26
				135-139	color 27
				140-144	color 28
				145-149	color 29
				150-154	color 30
				155-159	color 31
				160-164	color 32
				165-169	color 33
				170-174	color 34
				175-179	no function
				180-201	color fade, fast to slow
				202-207	stop
208-229	reverse color fade, fast to slow				
230-234	no function				
235-249	Color jump, fast to slow				
250-255	no function				
13	9	8	Zoom	0-255	from small to big
14	10	9	Control	0-9	no function
				10-14	pan/tilt blackout
				15-19	reserved
				20-24	reserved
				25-29	reserved
				30-34	reserved
				35-39	reserved
				40-44	defrost fan on
				45-49	defrost fan off
				50-54	pan reset
				55-59	tilt reset
				60-64	zoom reset
				65-69	reserved
				70-74	all reset
				75-79	reserved
				80-84	pan/tilt reverse
				85-89	pan reverse
				90-94	tilt reverse
				95-99	disable pan reverse
				100-104	disable tilt reverse
105-109	disable pan/tilt reverse				
110-114	reserved				
115-119	reserved				
120-124	fan ECO				
125-129	fan FULL				

TOUGH 350 PAR-DMX



Mode/Channel			Channel Name	DMX	Function
14CH	10CH	9CH			
14	10	9	Control	130-134	fan AUTO
				135-139	dimmer fast mode
				140-144	dimmer smooth mode
				145-149	no function
				150-154	Square curve
				155-159	I Square curve
				160-164	Scurve
				165-169	white mode
				170-174	full mode
				175-179	color calibration off when single color
				180-184	color calibration on when single color
				185-239	no function
				240-247	color calibration on
				248-255	color calibration off