



# T-200 LED SPOT-DMX

Advanced: 15CH Basic: 9CH

| Mode/Channel |                                    | Channel Name        | DMX     | Function                           |
|--------------|------------------------------------|---------------------|---------|------------------------------------|
| 15CH         | 9CH                                |                     |         |                                    |
| 1            | 1                                  | Pan                 | 0-255   | 0-540                              |
| 2            |                                    | Pan 16bit           | 0-255   | 16bit adjustable                   |
| 3            | 2                                  | Tilt                | 0-255   | 0-270°                             |
| 4            |                                    | Tilt 16bit          | 0-255   | 16bit adjustable                   |
| 5            |                                    | Pan/Tilt speed      | 0-255   | fast to slow                       |
| 6            | 3                                  | Color wheel         | 0-7     | white                              |
|              |                                    |                     | 8-15    | color 1                            |
|              |                                    |                     | 16-23   | color 2                            |
|              |                                    |                     | 24-31   | color 3                            |
|              |                                    |                     | 32-39   | color 4                            |
|              |                                    |                     | 40-47   | color 5                            |
|              |                                    |                     | 48-55   | color 6                            |
|              |                                    |                     | 56-63   | color 7                            |
|              |                                    |                     | 64      | white                              |
|              |                                    |                     | 65-189  | split color                        |
|              |                                    |                     | 190-221 | color scroll, fast to slow         |
|              |                                    |                     | 222-223 | stop                               |
| 7            | 4                                  | Rotating gobo wheel | 0-7     | white                              |
|              |                                    |                     | 8-15    | gobo 1                             |
|              |                                    |                     | 16-23   | gobo 2                             |
|              |                                    |                     | 24-31   | gobo 3                             |
|              |                                    |                     | 32-39   | gobo 4                             |
|              |                                    |                     | 40-47   | gobo 5                             |
|              |                                    |                     | 48-55   | gobo 6                             |
|              |                                    |                     | 56-63   | gobo 7                             |
|              |                                    |                     | 64-71   | gobo 7 shaking, slow to fast       |
|              |                                    |                     | 72-79   | gobo 6 shaking, slow to fast       |
|              |                                    |                     | 80-87   | gobo 5 shaking, slow to fast       |
|              |                                    |                     | 88-95   | gobo 4 shaking, slow to fast       |
|              |                                    |                     | 96-103  | gobo 3 shaking, slow to fast       |
|              |                                    |                     | 104-111 | gobo 2 shaking, slow to fast       |
|              |                                    |                     | 112-119 | gobo 1 shaking, slow to fast       |
|              |                                    |                     | 120-127 | white                              |
|              |                                    |                     | 128-189 | reverse color scroll, slow to fast |
| 190-193      | stop                               |                     |         |                                    |
| 194-255      | reverse color scroll, slow to fast |                     |         |                                    |
| 8            | 5                                  | Gobo rotating       | 0-63    | gobo index                         |
|              |                                    |                     | 64-145  | gobo rotating, slow to fast        |



# T-200 LED SPOT-DMX

Advanced: 15CH Basic: 9CH

| Mode/Channel |                | Channel Name       | DMX     | Function                            |
|--------------|----------------|--------------------|---------|-------------------------------------|
| 15CH         | 9CH            |                    |         |                                     |
| 8            | 5              | Gobo rotating      | 146-149 | stop                                |
|              |                |                    | 150-231 | reverse gobo rotating, slow to fast |
|              |                |                    | 232-255 | gobo rotating back and forth        |
| 9            | 6              | Prism and Rotation | 0-3     | no function                         |
|              |                |                    | 4-6     | prism effect 1                      |
|              |                |                    | 7-65    | gobo rotating, slow to fast         |
|              |                |                    | 66-123  | reverse gobo rotating, slow to fast |
|              |                |                    | 124-127 | prism effect 1                      |
|              |                |                    | 128-131 | no function                         |
|              |                |                    | 132-134 | prism effect 2                      |
|              |                |                    | 135-193 | gobo rotating, slow to fast         |
|              |                |                    | 194-251 | reverse gobo rotating, slow to fast |
| 252-255      | prism effect 2 |                    |         |                                     |
| 10           | 7              | Focus              | 0-255   | 0-100%                              |
| 11           |                | Dimmer             | 0-255   | 0-100%                              |
| 12           | 8              | Strobe             | 0-3     | no function                         |
|              |                |                    | 4-7     | on                                  |
|              |                |                    | 8-76    | synchronized strobe, slow to fast   |
|              |                |                    | 77-145  | pulse strobe, slow to fast          |
|              |                |                    | 146-215 | random strobe, slow to fast         |
|              |                |                    | 216-255 | on                                  |
| 13           |                | Control            | 0-7     | no function                         |
|              |                |                    | 8-15    | pan/tilt blackout                   |
|              |                |                    | 16-23   | color blackout                      |
|              |                |                    | 24-31   | gobo blackout                       |
|              |                |                    | 32-39   | pan/tilt/color blackout             |
|              |                |                    | 40-47   | pan/tilt/gobo blackout              |
|              |                |                    | 48-55   | pan/tilt/color/gobo blackout        |
|              |                |                    | 56-87   | no function                         |
|              |                |                    | 88-95   | no function                         |
|              |                |                    | 96-103  | pan reset                           |
|              |                |                    | 104-111 | tilt reset                          |
|              |                |                    | 112-119 | color reset                         |
|              |                |                    | 120-127 | gobo reset                          |
|              |                |                    | 128-135 | no function                         |
|              |                |                    | 136-143 | prism reset                         |
|              |                |                    | 144-151 | zoom+focus reset                    |
| 152-159      | all reset      |                    |         |                                     |
| 160-167      | no function    |                    |         |                                     |



# T-200 LED SPOT-DMX

Advanced: 15CH Basic: 9CH

| Mode/Channel |                                   | Channel Name | DMX     | Function                          |
|--------------|-----------------------------------|--------------|---------|-----------------------------------|
| 15CH         | 9CH                               |              |         |                                   |
| 13           |                                   | Control      | 168-231 | no function                       |
|              |                                   |              | 232-239 | no function                       |
|              |                                   |              | 240-255 | no function                       |
| 14           |                                   | Built-in     | 0-7     | no function                       |
|              |                                   |              | 8-23    | built-in 1                        |
|              |                                   |              | 24-39   | built-in 2                        |
|              |                                   |              | 40-55   | built-in 3                        |
|              |                                   |              | 56-71   | built-in 4                        |
|              |                                   |              | 72-87   | built-in 5                        |
|              |                                   |              | 88-103  | built-in 6                        |
|              |                                   |              | 104-119 | built-in 7                        |
|              |                                   |              | 120-135 | built-in 8                        |
|              |                                   |              | 136-151 | pan/tilt built-in sound control 1 |
|              |                                   |              | 152-167 | pan/tilt built-in sound control 2 |
|              |                                   |              | 168-183 | pan/tilt built-in sound control 3 |
|              |                                   |              | 184-199 | pan/tilt built-in sound control 4 |
|              |                                   |              | 200-215 | pan/tilt built-in sound control 5 |
|              |                                   |              | 216-231 | pan/tilt built-in sound control 6 |
| 232-247      | pan/tilt built-in sound control 7 |              |         |                                   |
| 248-255      | pan/tilt built-in sound control 8 |              |         |                                   |
| 15           | 9                                 | Zoom         | 0-255   | Big to small                      |