

TX390 BEAM-DMX

Advanced: 19CH Basic: 16CH



Mode/Channel		Channel Name	DMX	Function
19CH	16CH			
1	1	Pan	0-255	0-540
2	2	Pan 16bit	0-255	16bit adjustable
3	3	Tilt	0-255	0-270
4	4	Tilt 16bit	0-255	16bit adjustable
5	5	Pan/Tilt speed	0-255	fast to slow
6	6	Dimmer	0-255	0-100%
7		Dimmer 16bit	0-255	16bit adjustable
8	7	Strobe	0-7	off
			8-15	on
			16-131	synchronized strobe, slow to fast
			132-167	fast close slow open, slow to fast
			168-203	slow close fast open, slow to fast
			204-239	pulse strobe, slow to fast
			240-250	random strobe, slow to fast
251-255	on			
9	8	Color wheel	0-4	white
			5-8	color 1
			9-12	color 9
			13-16	color 3
			17-20	color 4
			21-24	color 5
			25-28	color 6
			29-32	color 7
			33-36	color 8
			37-40	color 7
			41-44	color 3
			45-48	color 11
			49-52	color 12
			53-56	color 13
			57-60	color 8
61-127	split color			
128-189	reverse color scroll, fast to slow			
190-193	stop			
194-255	color scroll, slow to fast			
10	9	Static gobo wheel	0-3	open
			4-6	gobo 1
			7-9	gobo 2
			10-12	gobo 3
			13-15	gobo 4

TX390 BEAM-DMX

Advanced: 19CH Basic: 16CH



Mode/Channel		Channel Name	DMX	Function
19CH	16CH			
10	9	Static gobo wheel	16-18	gobo 5
			19-21	gobo 6
			22-24	gobo 7
			25-27	gobo 8
			28-30	gobo 9
			31-33	gobo 10
			34-36	gobo 11
			37-39	gobo 12
			40-42	gobo 13
			43-45	gobo 14
			46-48	gobo 15
			49-51	gobo 16
			52-55	gobo 17
			56-59	open
			60-63	gobo 1 shaking, slow to fast
			64-67	gobo 2 shaking, slow to fast
			68-71	gobo 3 shaking, slow to fast
			72-75	gobo 4 shaking, slow to fast
			76-79	gobo 5 shaking, slow to fast
			80-83	gobo 6 shaking, slow to fast
			84-87	gobo 7 shaking, slow to fast
			88-91	gobo 8 shaking, slow to fast
			92-95	gobo 9 shaking, slow to fast
			96-99	gobo 10 shaking, slow to fast
			100-103	gobo 11 shaking, slow to fast
			104-107	gobo 12 shaking, slow to fast
108-111	gobo 13 shaking, slow to fast			
112-115	gobo 14 shaking, slow to fast			
116-119	gobo 15 shaking, slow to fast			
120-123	gobo 16 shaking, slow to fast			
124-127	gobo 17 shaking, slow to fast			
128-189	reverse color scroll, fast to slow			
190-193	stop			
194-255	color scroll, slow to fast			
11	10	Prism 1	0-4	off
			5-255	prism
12	11	Prism 1 rotating	0-127	prism index
			128-189	prism rotating, fast to slow
			190-193	stop

TX390 BEAM-DMX

Advanced: 19CH Basic: 16CH



Mode/Channel		Channel Name	DMX	Function
19CH	16CH			
12	11	Prism 1 rotating	194-255	reverse prism rotating, slow to fa
13	12	prism 2	0-4	off
			5-255	prism
14	13	Prism 2 rotating	0-127	prism index
			128-189	prism rotating, fast to slow
			190-193	stop
			194-255	reverse prism rotating, slow to fa
15	14	Frost	0-255	frost
16	15	Focus	0-255	0-100%
17		Built-in	0-7	off
			8-15	pan/tilt built-in 1
			16-23	pan/tilt built-in 2
			24-31	pan/tilt built-in 3
			32-39	pan/tilt built-in 4
			40-47	pan/tilt built-in 5
			48-55	pan/tilt built-in 6
			56-63	pan/tilt built-in 7
			64-71	pan/tilt built-in 8
			72-79	pan/tilt built-in 9
			80-87	pan/tilt built-in 10
			88-95	pan/tilt built-in 11
			96-103	pan/tilt built-in 12
			104-111	pan/tilt built-in 13
			112-119	pan/tilt built-in 14
			120-127	pan/tilt built-in 15
			128-135	pan/tilt built-in 16
			136-143	pan/tilt built-in 17
			144-151	pan/tilt built-in 18
			152-159	pan/tilt built-in 19
			160-167	pan/tilt built-in 20
			168-175	pan/tilt built-in 21
			176-183	pan/tilt built-in 22
			184-191	pan/tilt built-in 23
			192-199	pan/tilt built-in 24
			200-207	pan/tilt built-in 25
			208-215	pan/tilt built-in 26
			216-223	pan/tilt built-in 27
			224-231	pan/tilt built-in 28
232-239	pan/tilt built-in 29			

TX390 BEAM-DMX

Advanced: 19CH Basic: 16CH



Mode/Channel		Channel Name	DMX	Function
19CH	16CH			
17		Built-in	240-247	pan/tilt built-in 30
			248-255	pan/tilt built-in 31
18		Built-in speed	0-255	fast to slow
19	16	Control	0-69	off
			70-79	pan/tilt blackout enable
			80-89	pan/tilt balckout disable
			90-99	color blackout enable
			100-109	color blackout disable
			110-119	gobo blackout enable
			120-129	gobo blackout disable
			130-139	lamp on
			140-149	pan/tilt reset
			150-159	color reset
			160-169	gobo reset
			170-179	strobe/prism reset
			180-189	off
			190-199	focus reset
			200-209	all reset
			210-219	all blackout enable
220-229	all blackout disable			
230-239	lamp off			
240-255	off			